

PRUNE DEAD OR BROKEN BRANCHES

PROTECT FROM DAMAGE

STAKE ONLY IF NEEDED WITH WIRE THROUGH 1.5" NYLON STRAPPING DO NOT USE HOSE OR TUBING AROUND TRUNK


REMOVE ALL TAGS AT SUBSTANTIAL COMPLETION

4" DEPTH OF MULCH KEEP AWAY FROM TRUNK

ROOT FLARE AT OR SLIGHTLY ABOVE GRADE

REMOVE TWINE, WIRE & BURLAP FROM TOP 1/2 OF BALL

TEMPORARY BERM FOR WATERING

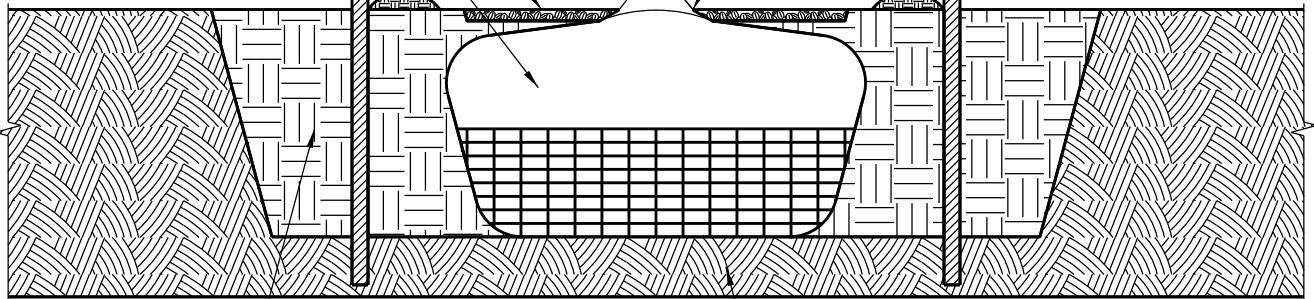

PLANTING HOLE 2-3 TIMES WIDTH OF ROOT BALL

UNDISTURBED SUBGRADE TO REDUCE SETTLING



DRW: CP

DATE: 2/19/16

APP: RCS

DATE: 2/19/16

TREE PLANTING BALLED AND BURLAPPED

STANDARD
PLATE
NO.
FORE-1002